


Adding the Thermal Radar to Arteco

Add the Thermal Radar to desired Arteco server as a video channel from configuration tab as an ONVIF device and enter the IP and credential information.

Thermal Radar ONVIF Info:	
User:	admin
Password:	admin

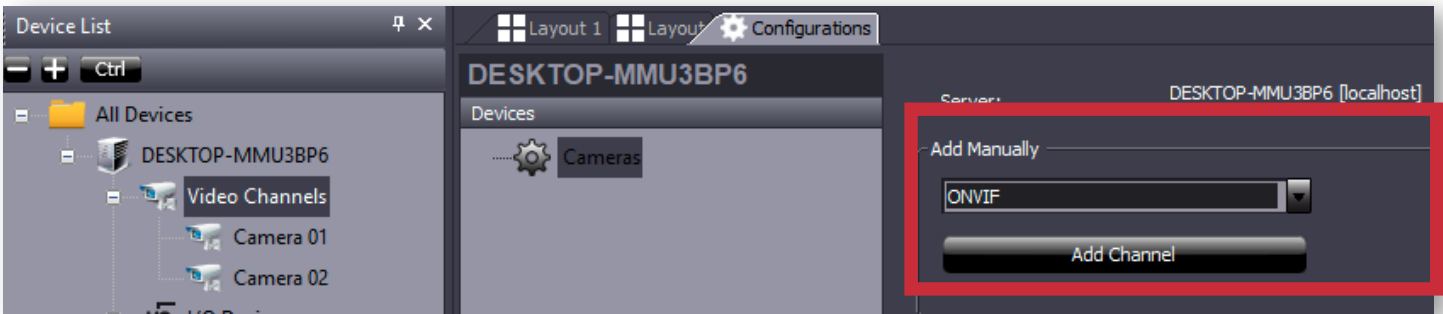



Adding PTZ into Arteco

Add PTZ to desired Arteco server as a video channel according to manufacturer.

Adding Alerts into Arteco

In order for Arteco to receive the alerts sent from the Thermal Radar,


- 1 Add either an "Input External State" or an "External I/O" in the configuration tab.
- 2 Select the alert receiver from the dropdown of the Thermal Radar Alert Receivers tab in the web interface.
- 3 From there specify the server address and port if differing from the default 80.
- 4 Open the Alert Rules tab, then specify rule settings to your application. after that copy the text that corresponds to the I/O or external state enabled in the VMS configuration in step one.

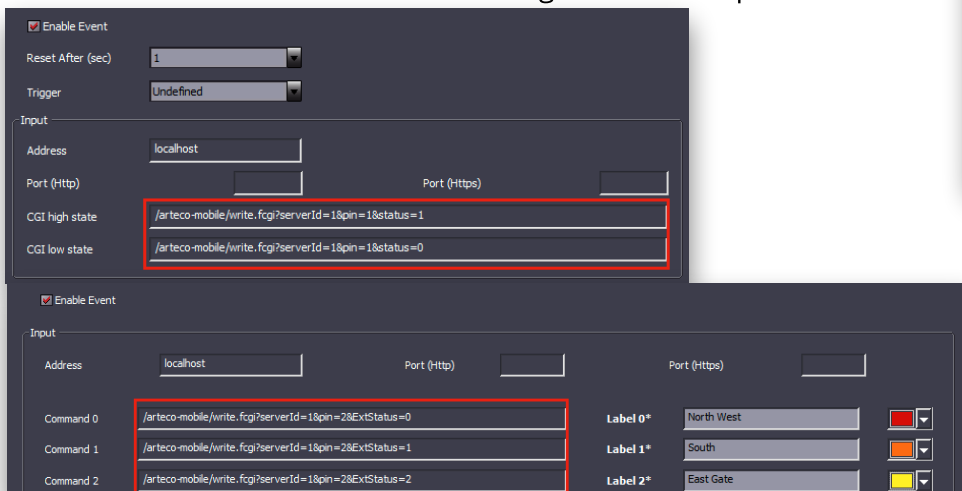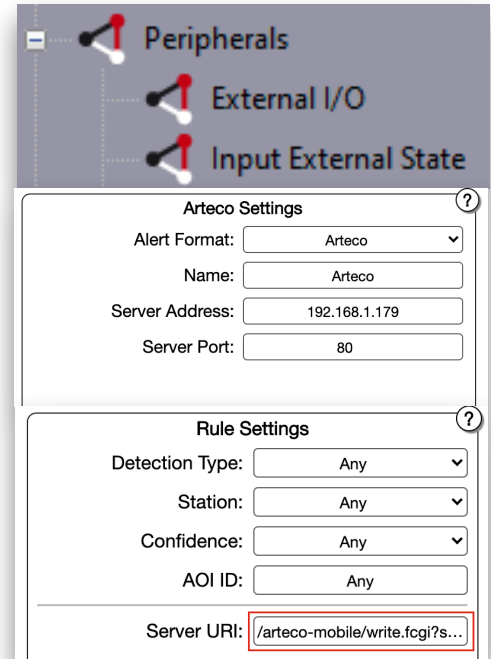

Displaying Alerts in VMS Client

Note: Ensure the Windows Firewall on the VMS has an exception to receive events from the Thermal Radar

The Live tab will show an alarm history and a live view of the cameras.

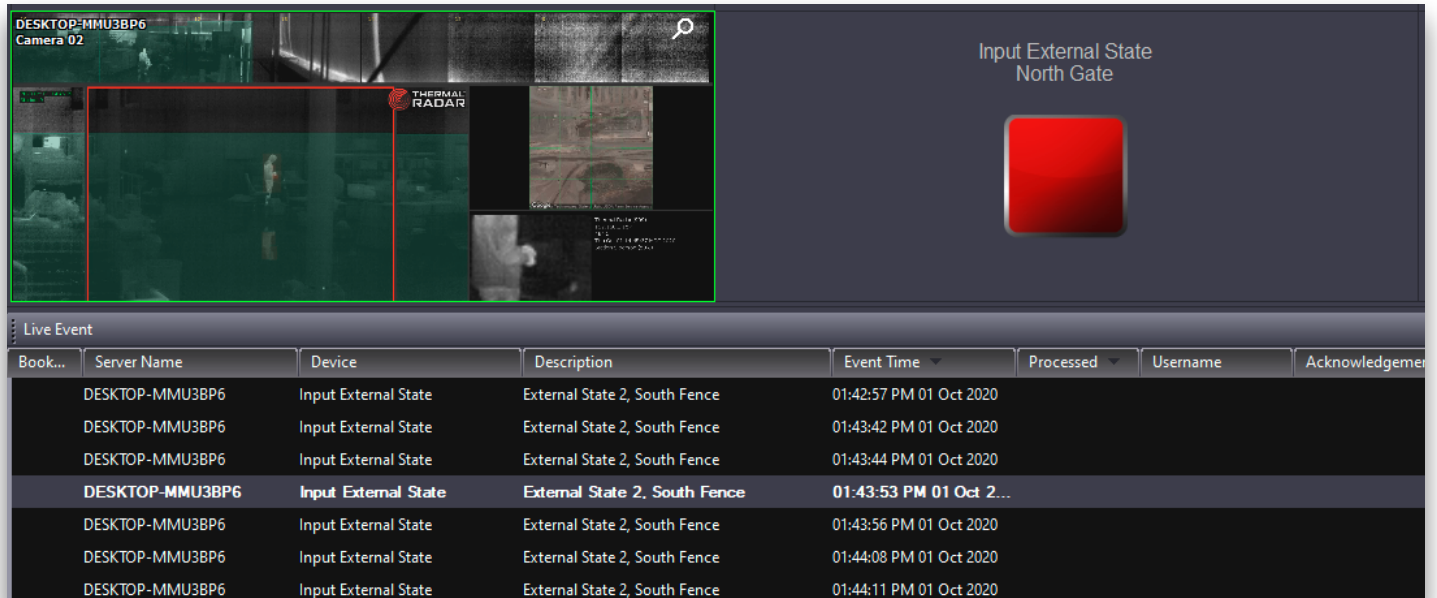

The screenshot displays the VMS Client interface. On the left, there is a live camera feed labeled 'DESKTOP-MMU3BP6 Camera 02' showing a thermal radar view of an outdoor area. On the right, there is a red square indicator labeled 'Input External State North Gate'. Below the camera feed, there is a 'Live Event' table with the following data:

Book...	Server Name	Device	Description	Event Time	Processed	Username	Acknowledgement
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:42:57 PM 01 Oct 2020			
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:43:42 PM 01 Oct 2020			
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:43:44 PM 01 Oct 2020			
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:43:53 PM 01 Oct 2020			
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:43:56 PM 01 Oct 2020			
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:44:08 PM 01 Oct 2020			
	DESKTOP-MMU3BP6	Input External State	External State 2, South Fence	01:44:11 PM 01 Oct 2020			

Test that Arteco is receiving Alerts from TRIA

Use the Alarm Manager Module within the Arteco Live tab to view the alarm history.

The alarms can also be tested by browsing to the Alert Rules page on the Thermal Radar and highlighting one of the rules and clicking .